



# INTERNAL PADDING GUIDE

This guide illustrates how to configure the internal padding correctly for a selection of popular DJ controllers.

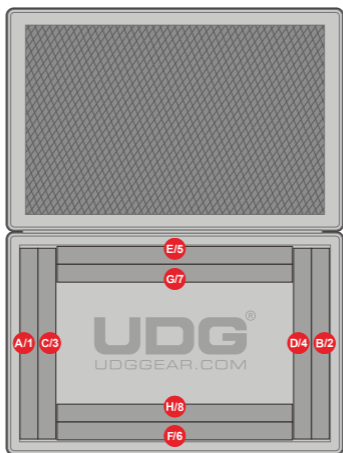

A B C D E F G H are for side padding  
1 2 3 4 5 6 7 8 are for base padding

Illustrations for making base padding

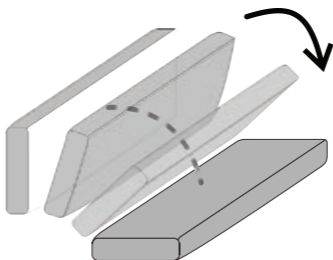

Flip the padding 90 degrees

# INTERNAL PADDING GUIDE

This guide illustrates how to configure the internal padding correctly for a selection of popular DJ controllers.

## EQUIPMENT

Pioneer DDJ SB	Use Side Padding	A B E F
	Use Base Padding	7 8
Pioneer DDJ RB	Use Side Padding	A B C D
	Remove Base Padding	
Reloop Beat Mix 2	Use Side Padding	A
	Use Base Padding	7 8
Reloop Beatpad	Use Side Padding	A B
	Use Base Padding	7 8
Reloop Terminal Mix 4	Remove Side Padding	
	Use Base Padding	7 8
NI Traktor S4 MK 2	Use Side Padding	A
	Use Base Padding	7 8
NI Traktor S2 MK 2	Use Side Padding	A B C E
	Use Base Padding	7 8
Numark NV	Remove Side Padding	
	Use Base Padding	7 8
Numark Mixtrack II	Use Side Padding	A B E F
	Use Base Padding	7 8
Numark Mixtrack Quad	Use Side Padding	A B E F
	Use Base Padding	7 8
Denon MC-6000	Use Side Padding	A B E F
	Remove Base Padding	
Denon MC-3000	Use Side Padding	A B C D E F G
	Remove Base Padding	
Novation 25 SL MK II	Use Side Padding	A B E
	Remove Base Padding	
Novation Nocturn 25	Use Side Padding	A B E F
	Remove Base Padding	
Akai MPC Renaissance	Use Side Padding	A
	Remove Base Padding	
Vestax VCI-400	Use Side Padding	A B
	Remove Base Padding	
Stanton SCS.4DJ	Use Side Padding	A B C E
	Remove Base Padding	