



# INTERNAL PADDING GUIDE

This guide illustrates how to configure the internal padding correctly for a selection of popular DJ controllers.

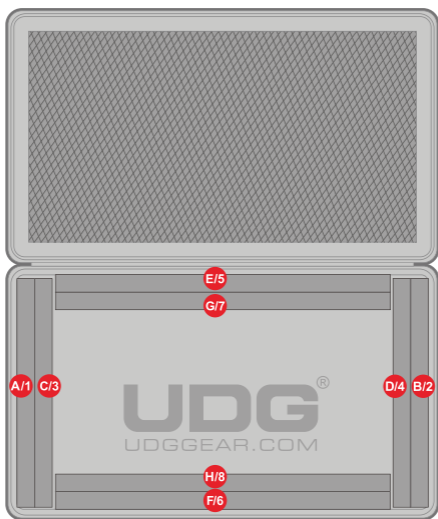

A B C D E F G H are for side padding  
1 2 3 4 5 6 7 8 are for base padding

Illustrations for making base padding

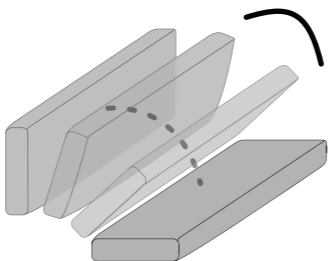

Flip the padding 90 degrees

# INTERNAL PADDING GUIDE

This guide illustrates how to configure the internal padding correctly for a selection of popular DJ controllers.

## EQUIPMENT

PIONEER DDJ RR/SR	Use Side Padding	A B C D E F
	Use Base Padding	7 8
PIONEER DDJ RX/SX/SX2	Use Side Padding	A
	Use Base Padding	7 8
PIONEER DDJ S1/T1	Use Side Padding	A E F
	Remove Base Padding	
PIONEER XDJ R1	Use Side Padding	A B E F G
	Remove Base Padding	
AKAI MPC REINAISSANCE	Use Side Padding	A B C D E F
	Use Base Padding	7 8
Denon DJ MC7000	Use Side Padding	A
	Use Base Padding	7 8
NUMARK NVII	Use Side Padding	A B C D E F
	Use Base Padding	7 8
NI TRAKTOR KONTROL S5	Use Side Padding	A B C E F
	Use Base Padding	7 8
NI TRAKTOR KONTROL S8	Use Side Padding	A B C D
	Use Base Padding	7 8
NI TRAKTOR KONTROL S4 MKII	Use Side Padding	A B C D E F
	Use Base Padding	7 8
RELOOP MIXON 4	Use Side Padding	A B
	Use Base Padding	7 8
ROLAND SYSTEM-1	Use Side Padding	A B C D E F
	Use Base Padding	7 8