


INTERNAL PADDING GUIDE

This guide illustrates how to configure the internal padding correctly for a selection of popular DJ controllers.

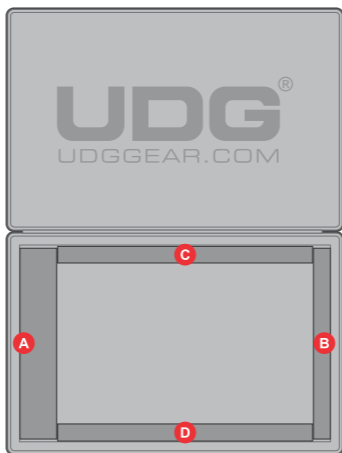

EQUIPMENT

Pioneer DDJ SB	Use Padding	A C D
Pioneer DDJ SR	Use Padding	A C
Reloop Beat Mix 2	Use Padding	A B C
Reloop Beat Mix 4	Use Padding	C
Reloop Terminal Mix 8	Remove Padding	
NI Traktor S4 MK 2	Use Padding	B C
NI Traktor S2 MK 2	Use Padding	A B C D
Numark NV	Use Padding	B D
Numark Mixtrack Quad	Use Padding	A B C D
Numark Mixtrack Pro	Use Padding	A C D
Denon MC-6000 MK 2	Use Padding	B C D
M - Audio Trigger Finger Pro	Use Padding	A B C D
Gemini G4V DJ	Use Padding	B C
Stanton SCS.4DJ	Use Padding	A B C D